

Kit contents may include:

- |                            |                                          |
|----------------------------|------------------------------------------|
| Sleeve, P625JS             | Joint Insulating Plug, P615/P625/P635JIP |
| Cable Adapter(s), P625CA-X | Lug, P6AL-X                              |
| Adapter Assembly Aid       | Silicone Lubricant                       |

The P615/P625/P635JIP connector is rated 600 amperes (900 amperes in copper) and 15/25/35 kV.

Warning


- \* System must be de-energized during installation or future operations on this product or it's components.
- \* Do not touch or move energized connectors or components by hand.
- \* Excess distortion of the assembled connector may result in its failure.
- \* Failure to follow these instructions will result in damage to the connector and serious or fatal injury.

Check contents to be sure they are:

- |            |                                                    |
|------------|----------------------------------------------------|
| * correct  | * undamaged                                        |
| * complete | * properly fitted with cable and mating components |


### STEP 1

1. Assemble bolts and washers. Flat washer against lug. Belleville washer (concave side down). Tighten bolt to 50–60 ft-lbs.
2. Clean and lubricate sleeve and joint body.

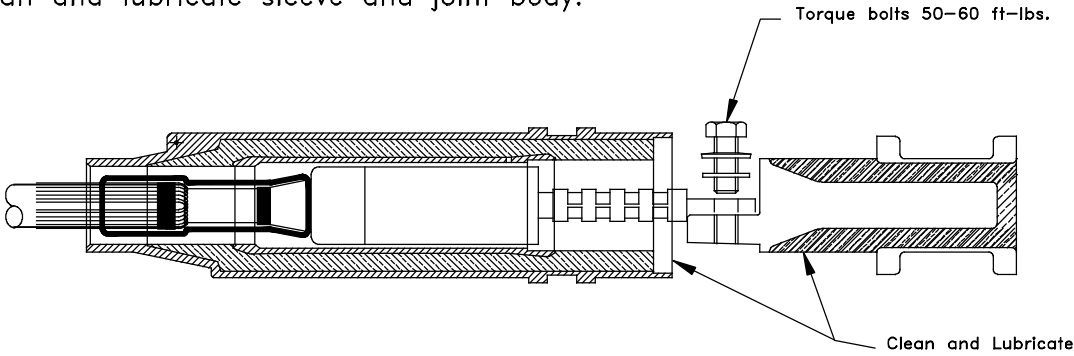

### STEP 2

1. Insert venting rod. Slide sleeve onto joint body. REMOVE VENTING ROD.

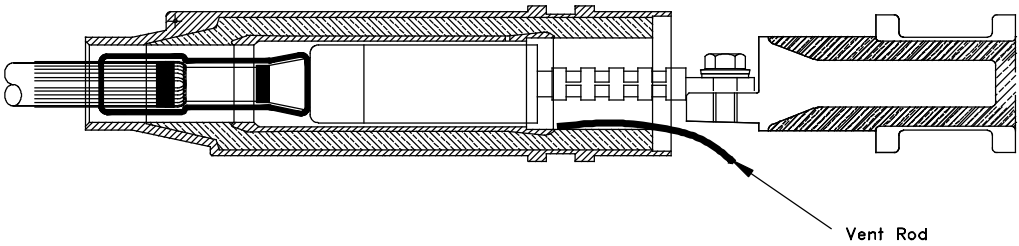

### STEP 3

1. Install and tighten interface clamp (35 kV only).

